


AUDEIA


AR201 /x

*Compact High Performance
Array Speakers*

USER MANUAL

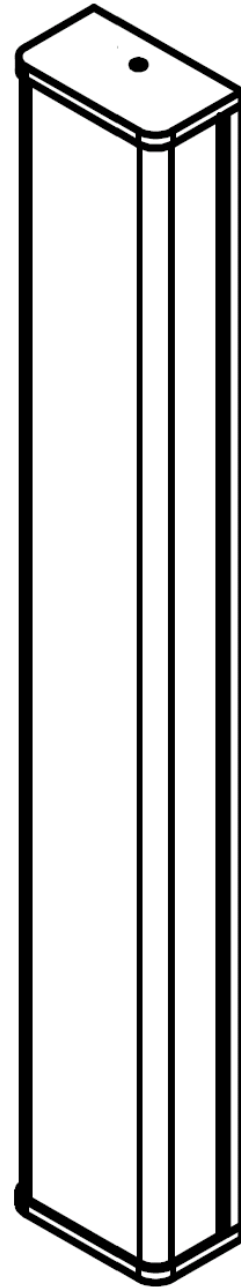

SIMBOLS

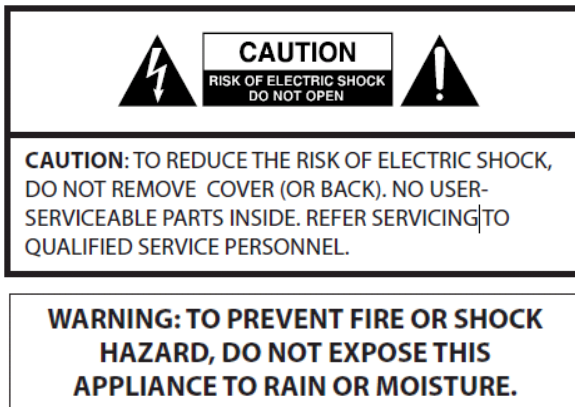

The lightning flash with arrowhead symbol (as the one in the left) is intended to alert the user to the presence of dangerous voltage within the product enclosure that may constitute a risk of electric shock to person.



The exclamation point within an equilateral triangle (as the one in the left), is intended to alert the user to the presence of important instruction concerning the use of the appliance.

SAFETY INSTRUCTIONS

- Read these instructions
- Keep these instructions
- Heed all warnings
- Trail all instructions
- Do not use this apparatus near water
- Clear only with dry cloth
- Install in accordance with the manufacturers instructions
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Do not block any ventilation openings.
- Do not defeat the safety purpose of the polarized or grounding type plug
- Ensures the source voltage matches the voltage of the power supply before turning ON the apparatus.
- If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plug, convenience receptacles, and the point where they exit from the apparatus.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- There are maybe some areas with high voltages inside, to reduce the risk of electric shock, do not remove any cover if the power supply is connected. The cover should be

removed by qualified personnel only. No user serviceable parts inside.

- This apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on this apparatus.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified personnel. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Make sure to connect the protective grounding to prevent any electric shock before turning ON the apparatus.
- The external wiring connected to the output hazardous live terminals requires installation by an instructed person, or the use of ready-made leads or cords.
- Never cut off the internal or external protective grounding wire or disconnect the wiring of protective grounding terminal.

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

- All the electrical and electronic equipment should be disposed separately from the municipal waste via collection facilities designed by the government or local authorities.
- By disposing of electrical and electronic equipment correctly you help to save valuable resources and prevent any potential negative effects on human health and the environment.
- Improper disposal of waste electrical and electronic equipment can have serious effect on the environment and human health because of the presence of hazardous substances in this type of equipment.



- The waste electrical and electronic equipment (WEEE) symbol, which show a bin that has been crossed out, indicates that electrical and electronic equipment must be collected and disposed of separately from household waste.

- Return and collection systems are available to end users. For more detailed information about the disposal of old electrical and electronics equipment, please contact your city office of waste disposal service or the shop where you purchased the equipment.

SAFETY PRECAUTION	
SIMBOLS.....	2
SAFETY INSTRUCTIONS.....	2
DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT	2
INTRODUCTION	
INCLUDED ITEMS.....	4
ABOUT THIS MANUAL.....	4
LEGAL DISCLAIMER.....	4
PRECAUTION FOR INSTALLATION AND USE.....	4
WARRANTY	4
INSTRUCTION	
OVERVIEW	5
POSITION.....	5
MOUNTING.....	5
MOUNTING WITH MK10 KIT.....	6
TECHNICAL SPECIFICS.....	7

Thank you for purchasing the AUDEIA AR201 Array Speakers. The AR201 is the result of a long research in materials, components and laboratory tests. For the best use of the AR201 speakers please read this user's manual carefully, and keep it in safe place for future reference.

INCLUDED ITEMS

Following are listed included items, please contact the store where you purchased this unit if any of listed items are missing or have been damaged during transportation.

- The AR201 unit Q.ty 1
- Warranty card Q.ty 1
- Owner's manual (this manual) Q.ty 1
- Mounting kit Q.ty.1

NOTE: the MK10 /X mounting supports are optional and sold separately.

ABOUT THIS MANUAL

This manual is composed of five main section: "SAFETY PRECAUTION" in witch there are safety information and instructions; "CONTENTS" with the table of contents; "INTRODUCTION" a brief description to introduce you in the use of apparatus; "INSTRUCTION" with technical information concerning installation and usage; "TECHINICAL DATA" with technical specifics.

Each section name is printed on the top side of the manual.

LEGAL DISCLAIMER

AUDEIA, RSS, and the other names of apparatus or components are trademarks or registered trademarks of respective owner.

No part of this manual may be reproduced or copied without write permission of AUDEIA.

Technical specification and appearance are subject to change without notice.

PRECAUTION FOR INSTALLATION AND USE

- The operating temperature should be between 4°C and 36°C
- To prevent degrade of sound quality and malfunction do not install in places with significant vibration, exposed to direct sunlight, in extremely hot places, in places with high humidity or bad ventilation, places exposed to rain or other water.
- Do not place anything on the unit
- Do not expose to fast reduction of temperature because condensation could occur with possible damaging of the apparatus. If this happen, leave the unit for one or two hours before turning the unit on.
- Avoid installing this unit on top of any heat-generating devices as power amplifiers also to avoid condensation.

- To clean the unit, wipe it lightly with a soft dry cloth. Do not wipe with cleaning cloths, paint thinner, benzene, athyl alcohol or other agents. Tis could damage the surface.

WARRANTY

To obtain Warranty Service, the buyer should first fill out and return the enclosed Warranty Registration Card compiled in every parts within 10 days of the Purchase Date.

In case of return for any warranty service, please make sure that the product is well packed in its original shipping carton, and it can protect your unit from any other extra damage.

Please provide a copy of your sales receipt and give detail information about your return address and contact telephone number.

The warranty service is only available to the original consumer, who purchased this product directly from the retail dealer, and it can not be transferred.

The warranty does not apply to the damages to this product that occurred as the following conditions:

- Normal tear and wear.
- Any abuse or misuse of this product, or use not in accordance with this manual.
- The product has been altered or modified in any way.
- Damage which may have been caused either directly or indirectly by external and independent cause as other products malfunctions, shocks, and so on
- Abnormal service or repairing by not authorized technicians.
- In no event shall AUDEIA be liable for any incidental damages (if not specifically prescribed by the states laws).

OVERVIEW

The AR201 is the result of a long research in materials, components and laboratory tests. The strict guide line for the project was be "optimization".

Thanks to quality of the material and the accuracy of the acoustical design this system has high performances and natural sound in the fewest space.

POSITION


The right position of the AR201 is related to the acoustical and dimensional characteristics of the listening site. Following some simple guide line for a right position.

The distance from the ground have to be a bit over the ear of the listening (normally and average of 5,58 feet (1,7 meters). This quote have to be increased according to de distance from the more close and the more far listener; 0,4 inches (1 cm) for each 3,28 feet (1 meter) of interposed distance.


The orientation have to be to the centre of the interested listening area. If there are more speakers, any one has to cover a part of the listening area, the area more closed to it.

MOUNTING


1) In the mounting kit find the "holes reference card". Put this in the placement point and with a drill make some holes as first reference (only some millimeter of depth) according to the card indication.

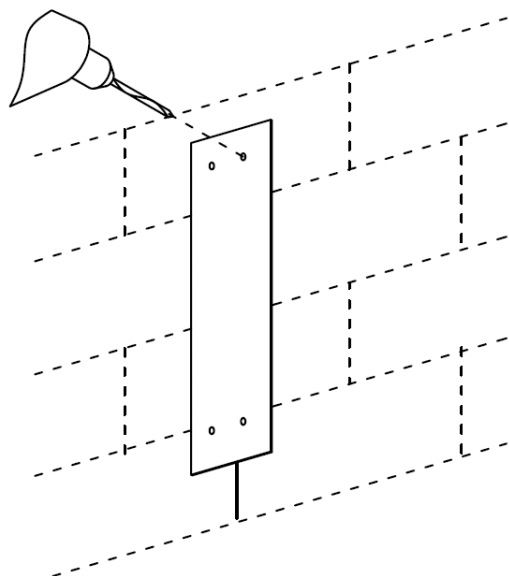


2) In the previously made holes now you can make the holes for the rawplug.

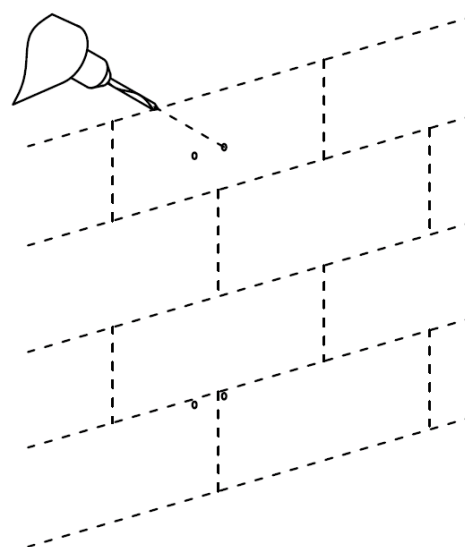

3) At this point you can mount the supports.

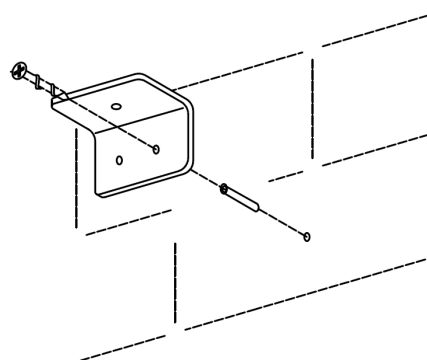


4) Now you can mount the speakers. In the top and in the bottom there are three holes, you have to chose the one that match with the desired orientation.

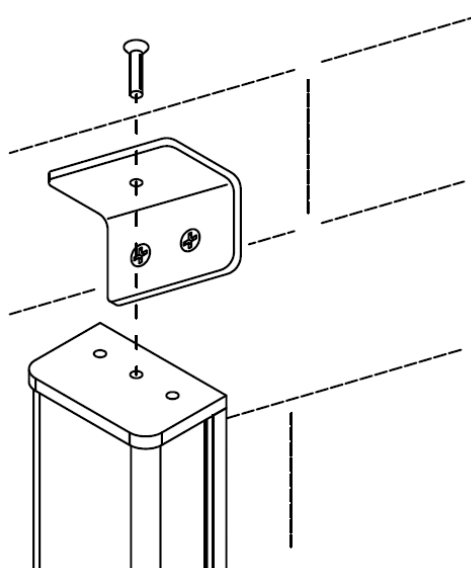


MOUNTING WITH MK10 KIT

1) In the MK10 KIT find the "holes reference card" as a reference to make the hole in the wall (see step 1 and 2 in the previous paragraph).


NOTE: in the MK10 KIT installation is very important of make the hole with care, be sure to make the hole perpendicular respect to wall

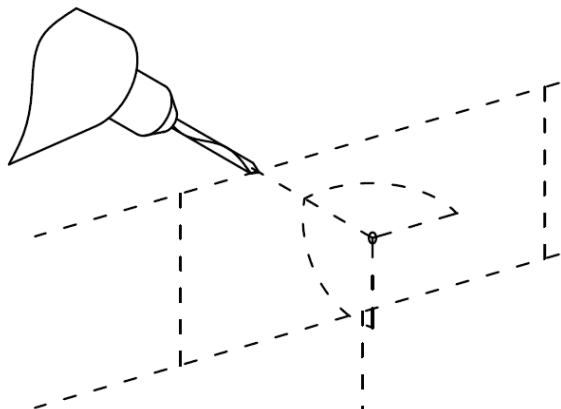

2) Screw the stud in the rear side hole of the support.

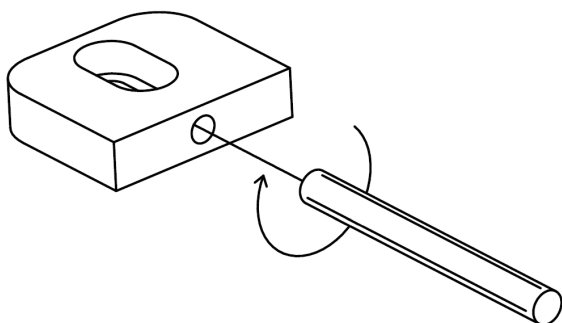


3) Insert the rawplug in the wall and screw the support in it.

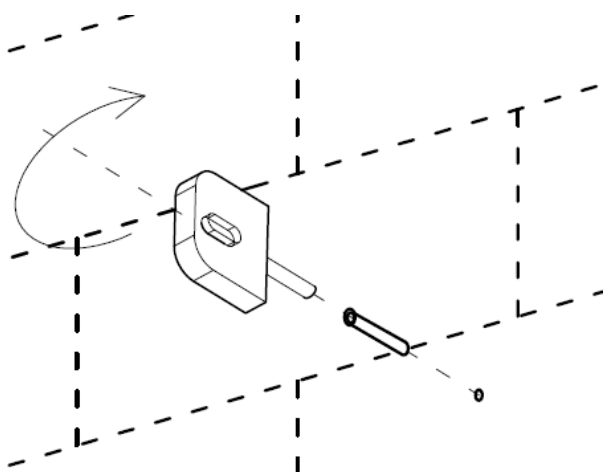

NOTE: Pay attention screwing the support, the corner could damage the wall, if required apply a transversal force to correct the rotation.

4) Now you can mount the speakers. In the top and in the bottom there are three holes, you have to chose the one that match with the desired orientation.

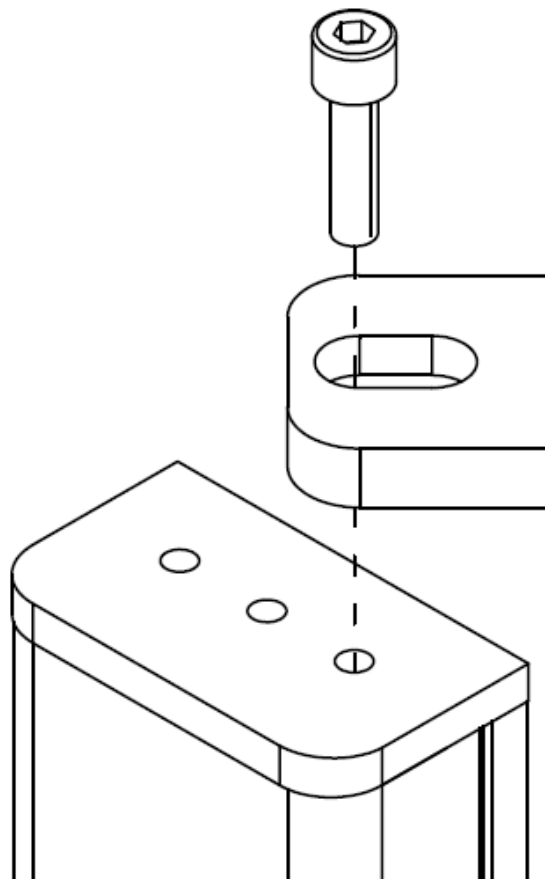

TECHNICAL SPECIFICS

Power:	32W RMS – 64W MAX
Impedance:	8 Ohm
Frequency response:	120-20k Hz
Sound pressure level:	114 dB SPL/1m at nominal power
Sensitivity	99 dB SPL 1w/1m
Speakers:	8X1" – aluminium membrane
Dimension (WxDxH):	60X36X460 mm (2,36"X1,41"X18,11")
Operating temperature range:	5-35°C/41-95°F
Weight:	2.14 kg (4,70lb)
Connection:	Red and black wires
